

ROSIÈRES 

 
COOKERS WITH OVEN

33001025 RBC127RU/1

Service Manual



Service

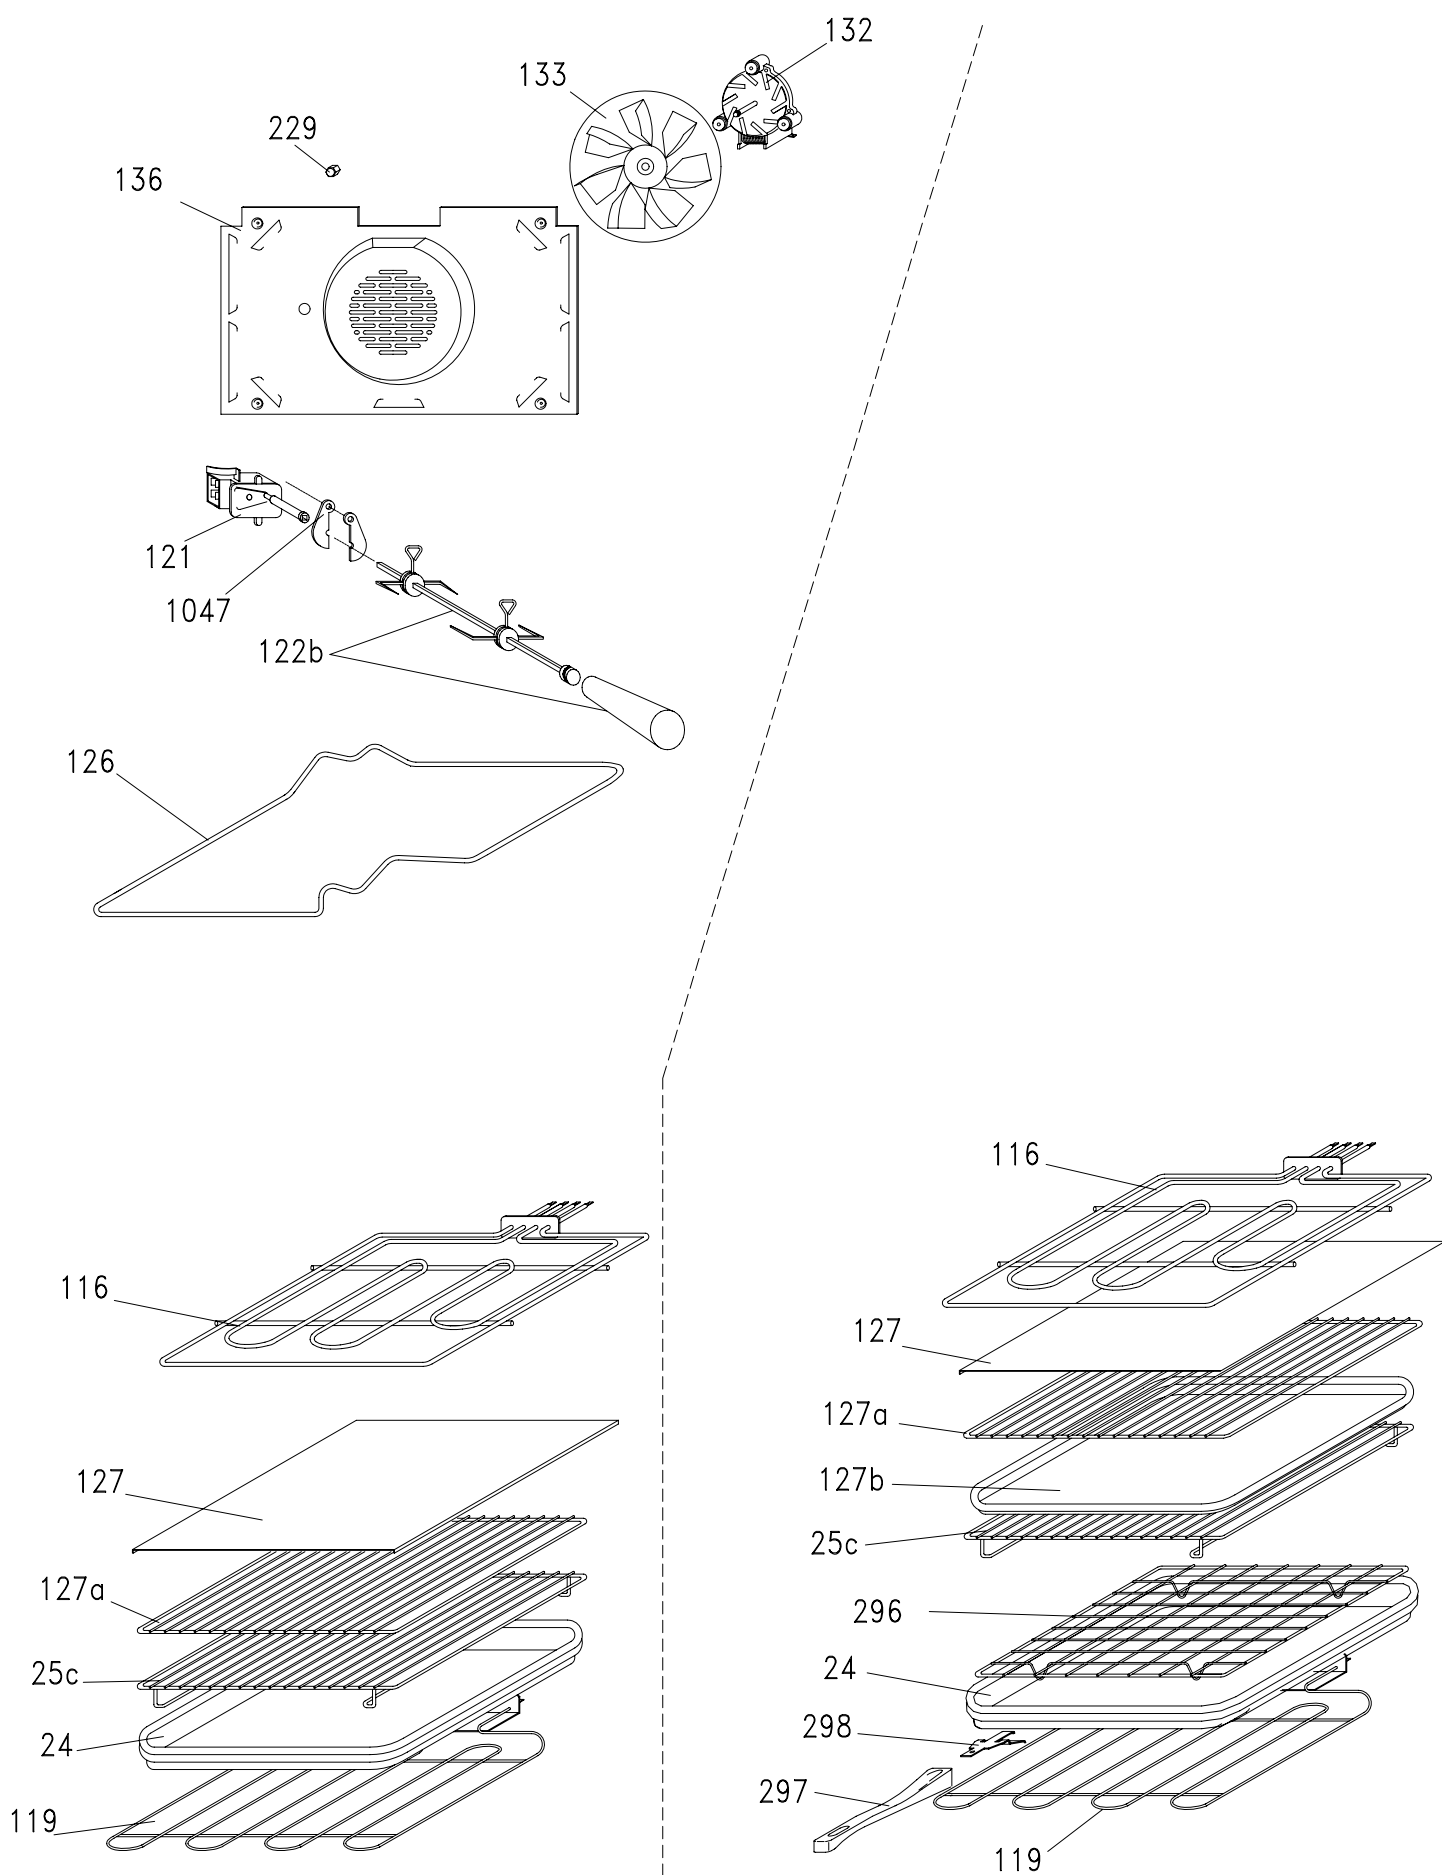

33001025 RBC127RU/1 1321(20/05/2013)

Ref	Description	Code	Begin	End
1	Oven cabinet assy	44003614		
1	Oven cabinet assy	44003612		
2	Oven cover	44002846		
2	Oven cover	44002846		
6	Chimney assy	44000435		
6a	Chimney assy - R/H	44000434		
6b	Chimney assy - L/H	44000436		
7	Rear insulator wall	44000457		
7c	Rear insulator wall-R/H	93784842		
7d	Rear insulator wall-L/H	93784838		
12	Upper trim	93785453		
14	Foot assembly	93785025		
17a	Spring	93735066		
19	Drawer sliding pat	93631125		
19a	Drawer holding pat	93768026		
20	Dish warmer drawer	93764009		
21	Dish warmer drawer cover	44002599		
21a	Dish warmer door liner	44002593		
24	Oven tray	93710887		1138(19/09/2011)
24	Oven tray	41027699	1139(26/09/2011)	
25c	Oven tray supportin.shelf	44003273		
25c	Oven tray supportin.shelf	44003273	1139(26/09/2011)	
26b	Front piece lower trim	44000455		
27	Cristal front piece	44004618		
31c	Facia panel support	93783984		
32c	Rubber buffer	93387975		
34d	R/H enameled side panel	93775542		
34e	L/H enameled side panel	93775559		
35	R/H side trim for should.	93784244		
36	L/H side trim for should.	93784241		
37	Shoulder	93785205		
39	Enameled worktop	44003810		
60	Grill 2 F	44003811		
61e	WOK Grill reduction	93784374		
64c	Half rapid spreader cover	93786111		
64d	Ultra rapid spread. cover	93786113		
64x	Rap.flame spre.cover Mijorose	93786114		
67	Electronic ignition box	41006099		
68g	Electr.ignit.sp.plug L650	41005058		
70	Spring for sparking plug	93629301		1137(12/09/2011)
71	Benzing clip	93531945		
71a	Sparking plug fixi.spring	92483601		
73a	Injectors mounting tool	93783027		
74	PLG injectors set	93962015		
74b	Methan gas injectors set	93962023		
75	Plaque injector support	93784405		
77g	Thermostat pyrolyser	93480317		
80	Knob	44000781		
80f	Ch.over switch/ther.knob	93786467		
85a	Electric thermostat	44000534		



Service

Ref	Description	Code	Begin	End
85c	Electric thermostat	93481224		
89	Thermost.bulb fix. spring	41012361		
90a	Oven change over switch	93757805		
90c	Change over switch	93786045		
90e	Change over switch gasket	93451979		
91b	Half-rapid gas tap	44003093		
92d	R/H front burner fee.hose	44003200		
92e	R/H rear burner feed.hose	44003198		
92f	L/H front burner fee.hose	44003197		
92g	L/H rear burner feed.hose	44003199		
93	Rear spacer	93774370		
96	Gas distribution hose	93784269		
97	Hose union for methan gas	93504868		
97a	Bent connection	93499846		
97b	Hose union gasket	93409514		
97b	Hose union gasket	92439520		
97b	Hose union gasket	92439520		
97l	Bent connection conic	93580769		
98	Hose union for liquid gas	93504850		
104	Oven lampholder	93782708		
104	Oven lampholder	93782708		
106	Control light	93783613		
106d	Red lens for contr. light	41030218		
107	Minutes minder	44004595		
107a	Timer	93784425		
110b	Ignit. microswitch chain	44003201		
116	Electric grill heater	44003282		
116	Electric grill heater	44003282		
119	Oven heating element	44003315		
119f	Oven heating element-R/H	93700953		
120	Heating element support	93765006		
121	Turnspit reduction gear	44002394		
122b	Kitchen spit complete	44003440		
126	Kitchen spit support	44003276		
127	Pastry plate	93617223		
127a	Pastry plate suppor.shelf	44003272		1138(19/09/2011)
127b	Pastry plate inox	93768018		
128a	Half-rapid burner	93785773		
128c	Ultrarapid burner	93785771		
128m	Triple crown burner	93786063		
131	Junction box	44000520		
132	Motor fan	93784867		
133	Fan	93503555		
136	Fan protection	93629228		
171c	Oven side gasket	93775690		
171c	Oven side gasket	93775690		
173	-U- shaped gasket	93628147		
175	Oven inner door	93784988		
175d	Right inner door	93784986		
176	Oven door inner glass	44003052		



Service

Ref	Description	Code	Begin	End
176m	Right oven door inner glass	93784097		
177	Internal glass fix.plate	93761823		
177	Internal glass fix.plate	93761823		
178	Oven door glass	93786125		
178	Oven door glass	93786125		
178a	Oven door - outer	93775641		
178a	Oven door - outer	93775641		
179	Oven door handle	93786465		
179	Oven door handle	93786465		
179b	Handle fixing support	93754307		
179b	Handle fixing support	93754307		
179p	Handle support bracket	93785604		
179p	Handle support bracket	93785604		
182	Upper trim oven door	44000278		
182	Upper trim oven door	44000278		
182f	Ring	93714996		
184	Door hinge	93762185		
184	Door hinge	93762185		
185	Oven door hinge mounting	93764942		
185	Oven door hinge mounting	93764942		
193	Heat protection	93786083		
193	Heat protection	93786083		
197	Lower protection	93753531		
197	Lower protection	93753531		
197b	Rear cross piece	44000437		
197c	Right vertical cross piece	44002556		
197d	Left vertical cross piece	44002555		
197e	Rear vertical cross piece	93784908		
197e	Rear vertical cross piece	93784908		
203a	Kickpanel-Right	93785396		
203b	Kickpanel-Left	93785395		
207	Chimney seat door	44000800		
207	Chimney seat door	44000800		
210	Change ov.switch bracket	93649242		
210a	Rear change ov.switch bracket	93786047		
210a	Rear change ov.switch bracket	93786047		
218	Turnspit reduct.gear sup.	93708634		
221	Gas tap fixing bracket	93784281		
221a	Tap/hose fixing bracket	44000310		
229	Fan fixing bolt	93514453		
238	Dashboard end plate	44000809		
246	Selfcleaning panel	93773919		
247b	Rear selfcleaning panel	93634632		
250	Thermocouple L.800	93786043		1229(16/07/2012)
251a	Thermocouple fixing nut	93664449		
257	Thermocouple L.600	91208116		
257a	Thermocouple L.450	93780509		
257g	Rapid Thermocouple L.330	91208124		
259d	Worktop thermocouple fixing nut	93782444		
260a	Half-rap.burner support	44000002		



Service

Ref	Description	Code	Begin	End
260b	Rapid burner support	44000003		
260c	Ultrarapid burner support	93782880		
262a	Half-rapid burner support bracket	93787264		
262b	Rapid burner support bracket	93787265		
265	Insulating plate	93462042		
266	Internal fan stop switch	93619450		
267a	Microswit.driving bracket	44003202		
269a	Rear right wall supp.bracket	44000442		
269a	Rear right wall supp.bracket	44000442		
269b	Rear left wall supp.bracket	44000443		
269b	Rear left wall supp.bracket	44000443		
278a	R/H hinge rollel bracket	93785443		
278b	L/H hinge rollel bracket	93784025		
287	Fan motor	44001188		
288	Conveyor assembly	44000433		
288	Conveyor assembly	44000433		
292	Screw pin	93628824		
293	Inner glass gasket	93746865		
293a	Inner glass gasket	93782279		
293b	Inner glass gasket	93724136		
296	UK oven tray grate	92782796		
296	UK oven tray grate	41028310	1139(26/09/2011)	
297	UK oven tray handle	92950468		1138(19/09/2011)
297	UK oven tray handle	41030678	1139(26/09/2011)	1243(22/10/2012)
297	UK oven tray handle	42807417	1243(22/10/2012)	
298	UK oven tray handle hook	92890953		1138(19/09/2011)
349a	Frame corner plug	93723674		
349a	Frame corner plug	93723674		
800	Door	93786010		
800	Door	93786010		
1002a	Lower roller	93765055		
1002a	Lower roller	93765055		
1006	Thermal security	93654820		
1016	Lock control	93780214		
1016a	Lock control disc	44002452		
1017	Catalyst	44002042		
1017a	Pyrolyser box	93631182		
1018	Lock system assy	93588010		
1018	Lock system assy	93588739		
1018a	Return spring	93588390		
1018b	Push rod	93588002		
1021	Oven door outer gasket	93746857		
1039a	Straps set	93780843		
1047	Turnspit little door	93658284		
1047a	Right turnspit little door	93410884		
1047b	Left turnspit little door	93410892		
1063a	Steack burner air regul.	93463891		
1065	Cast iron cooking plate	93785866		
1065a	Cooking plate closure	93860245		
1065b	Steack cooking plate	44003813		




Service

Ref	Description	Code	Begin	End
1065d	Grill	44003812		
1067	Headboard front wall	93785452		
1068	Trade mark plate	93747582		
1070	Handling tool	93445500		
1071	Big burner flame spreader	93594190		
1071a	Big burner body	93784380		1137(12/09/2011)
1071a	Big burner body	44005540	1139(26/09/2011)	
1071b	Rise big burner body	93746469		
1071c	Core rise big burner	44003503		
1072	Big burner valve tap	44003096		
1072a	Big burner feeding hose	44003196		
1073	Big burner support	93784392		
1203	Fixing pin	93458263		
1204	Upper crosspiece	93785525		
1205	Thermostat holder	44000353		
1207	Support	44002439		1139(26/09/2011)
1210	Side protection left	44002334		
1210	Side protection left	44002334		
1210a	Side protection right	93765030		
1243	Mose	93786028		
1251	Inner door	93782273		
1284	Inner middling glass	93751725		
1323	Screen glass assy	93785043		
1349	Anti-vibrations braket	93786791		




Service

 FOUR GAUCHE ET DESSUS

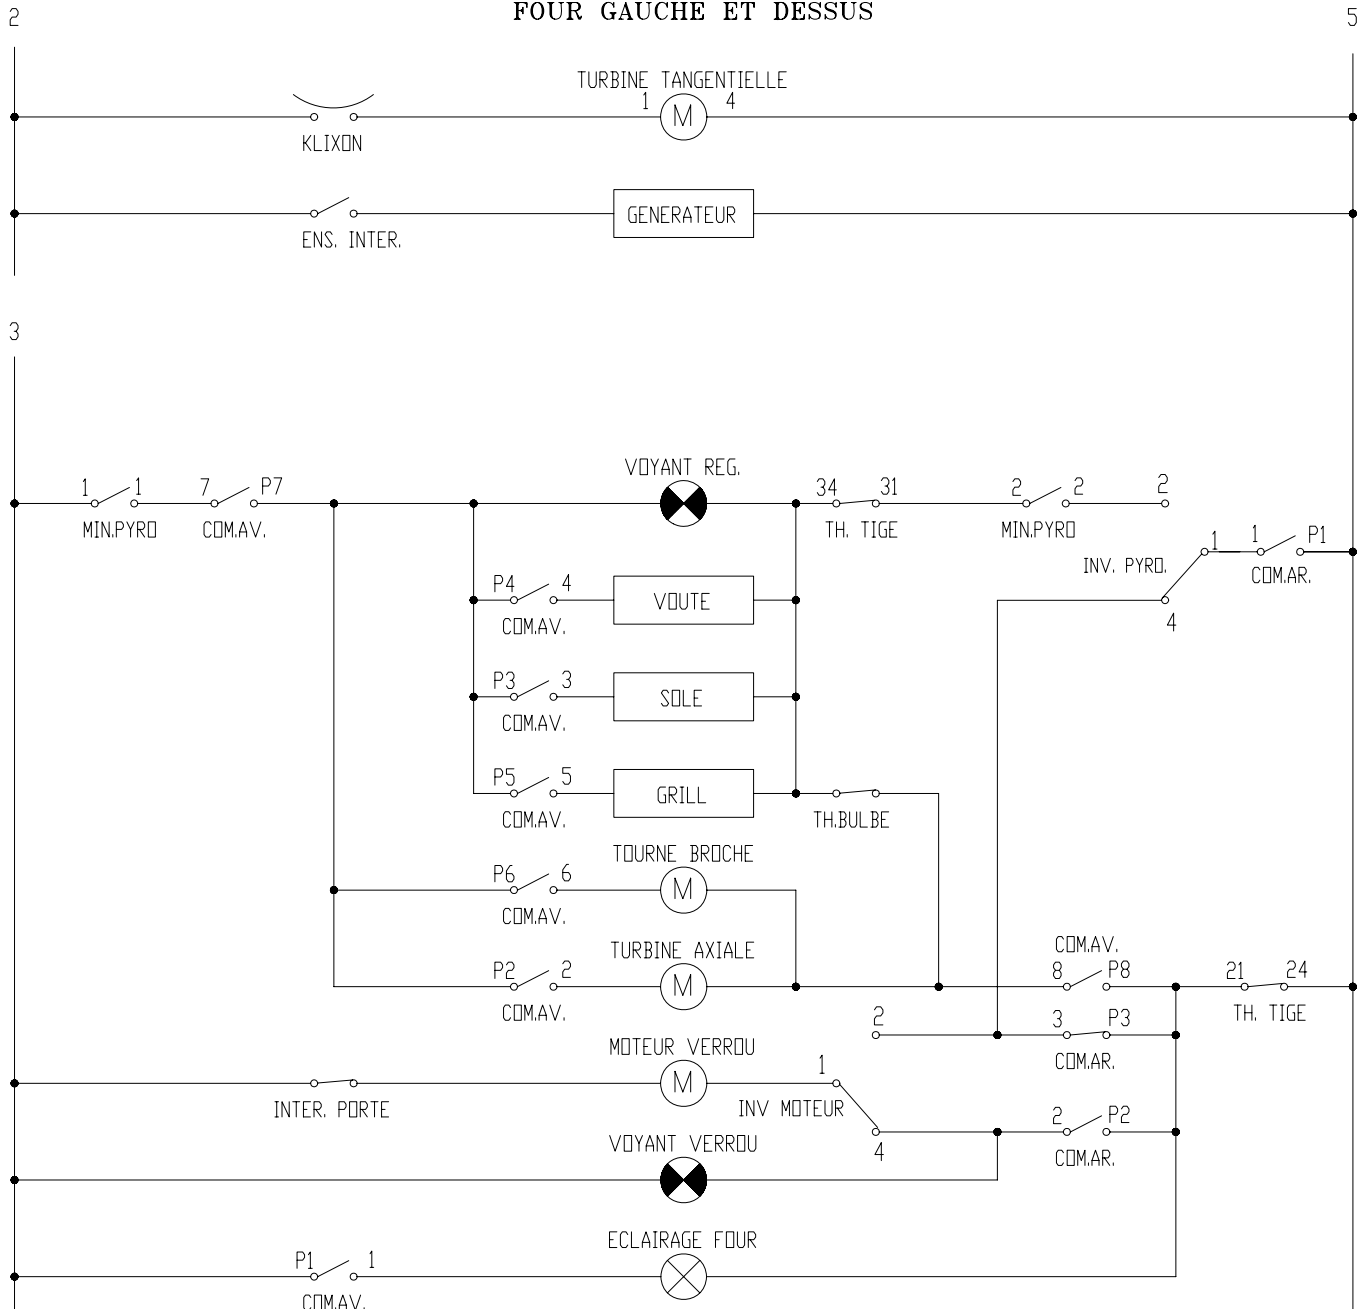


THERMOSTAT PYROLYSE
REF. 93480317
VALEUR DE COMMUTATION
(A LA COUPURE)
1 = 370 °C 2 = 370 °C
3 = 505 °C

 COMMUNICATEUR REF. 93786045
BUTEE ENTRE LES POSITIONS 8 ET 9

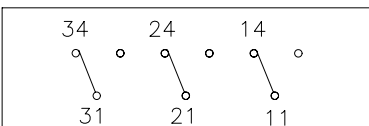


		0	1	2	3	4	5	6	7	8	9
PARTIE ARRIERE (AR)	8 - P8										
	7 - P7	■	■	■	■	■	■	■	■	■	■
	6 - P6										
	5 - P5										
	4 - P4				■	■	■	■	■	■	■
	3 - P3				■	■	■	■	■	■	■
	2 - P2										
	1 - P1										
PARTIE AVANT (AV)	8 - P8										
	7 - P7				■	■	■	■	■	■	■
	6 - P6										
	5 - P5										
	4 - P4				■	■	■	■	■	■	■
	3 - P3				■	■	■	■	■	■	■
	2 - P2										
	1 - P1										

 FOUR DROIT

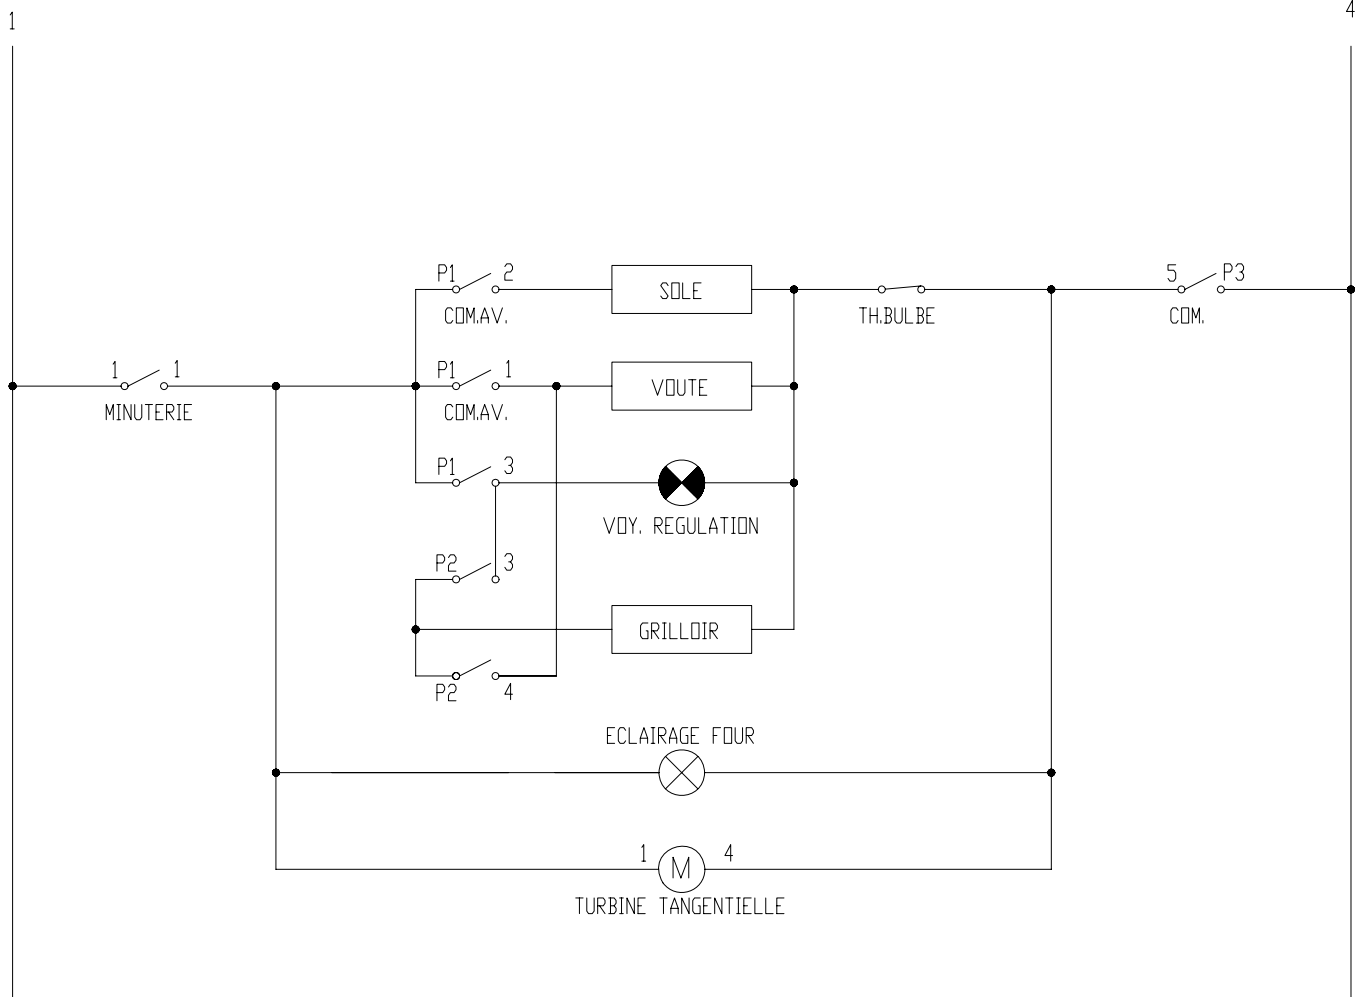

COMMUTATEUR REF. 93757805

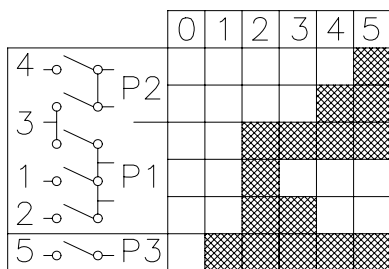 



TYPE APPAREIL:
RCB127/1

MARQUE:
ROSIERES

SCHEMA DE CABLAGE
DU 26/07/10

CABLAGE FOUR G ET DESSUS

CABLAGE FOUR D

